

Brodware

1.9953.00.0.XX Wall Mounted Soap Dispenser

Installation Guide

- 1) Remove the fixing brackets from the soap pump assembly by removing the grub screws.
- 2) Drill 2x 6mm diameter holes through the finished face of the wall vertically at 78mm from centre to centre.
- 3) Insert the red star plugs into the holes. Secure the fixing brackets to the wall using the screws provided.
- 4) Push and fit the soap pump assembly onto the wall fixings, and secure with the grub screws.
- 5) Remove the lid by inserting the allen key supplied into the larger grub screw (on the same side as the mounting grub screws), and turning the grub screw CLOCKWISE / into the cap. NOTE: The small grub screw on the other side is only used to locate cap into position.
- 6) Fill the soap pump assembly with soap, and refit the lid. Turn the larger grub screw ANTI-CLOCKWISE to lock the lid into place.
- 7) Press the dispensing button until soap starts to come out from the outlet. Test for functionality.

*Recommended soap viscosity : 100-3800 cPs

MAINTENANCE: Pour 250ml of water into the soap pump assembly and press the dispensing button to flush out and clean out the unit. Keep pressing until the water has been completely used. Refill with soap and test for functionality. Perform this once a month to ensure the longevity of the unit.

