

Brodware

1.9964.00.0.XX Wall Mounted Toilet Brush Installation Guide

- 1) Loosen and remove the grub screw, then separate the mounting bush from the toilet brush assembly.
- 2) Drill two mounting holes in the finished wall surface, positioned 45 mm centre-to-centre vertically, ensuring accurate alignment for a secure fit. (Fig. A)
- 3) Insert the supplied wall plugs, then fix the mounting bush firmly to the wall using the provided screws. (Fig. A)
- 4) Place the toilet brush assembly onto the mounted bush, press fully into position, and tighten the grub screw to lock the unit securely. (Fig. C)
- 5) Insert the liner, then place the toilet brush handle into the assembly. (Fig.D)

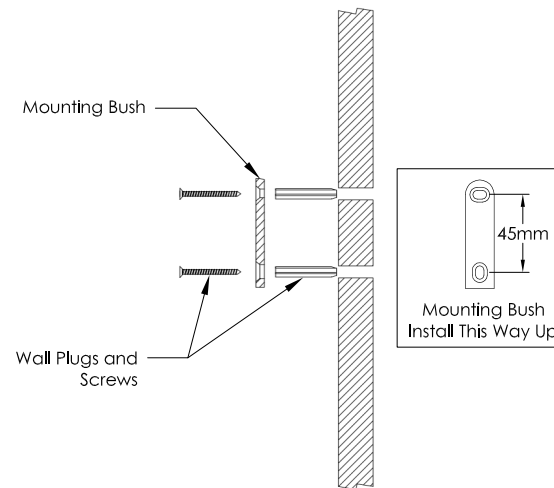


Fig .A

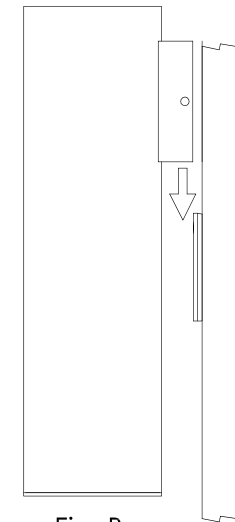


Fig .B

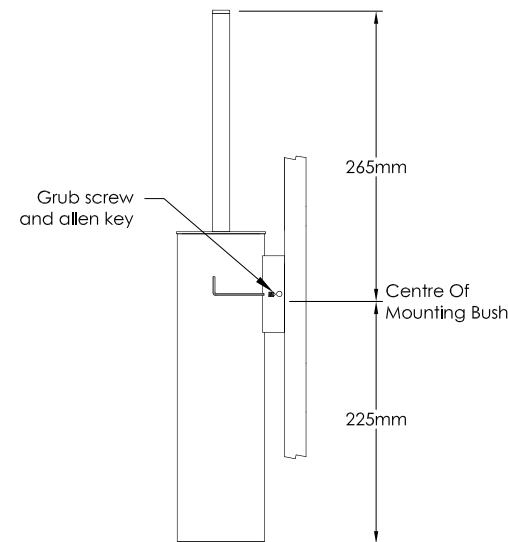


Fig .C

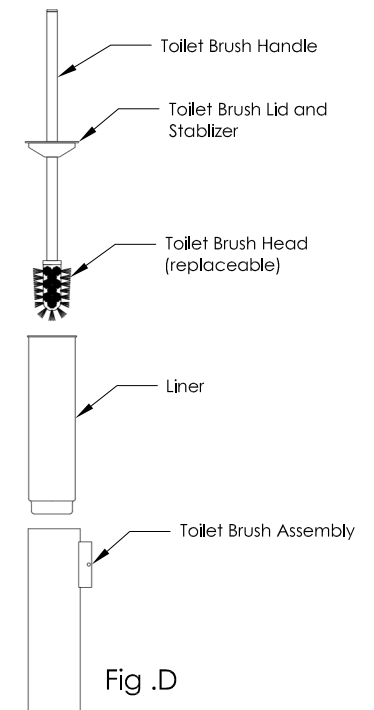


Fig .D

MAINTENANCE: Remove the toilet brush, to remove the liner. Rinse and clean the liner as required. (Fig. D)