

Brodware

1.9711.37.0.XX City Plus

Flush Mount Ceiling Rose

Installation Guide

- 1) Cut a hole in the ceiling 21.5mm in diameter.
- 2) Place the rose aside in the ceiling space.
- 3) Run a 1/2" BSP male thread for the water supply near the installation area, inside the ceiling space. A flexi hose will be required to connect the rose (not supplied).
- 4) Remove the mounting brackets from the mounting plate.
- 5) Push the mounting plate through the hole in the ceiling. Secure the mounting plate to the ceiling using the mounting brackets. A flat head screw driver and an adjustable spanner are required.
- 6) Fit a male/female flexi hose to the water feed point in the ceiling.
- 7) Connect the male end of the flexi hose (not supplied) to the shower rose in the ceiling.
- 8) Place the shower rose down onto the bracket. Test for functionality.

IMPORTANT

All tapware and showers are to be installed by a licenced plumber, and to Australian Standards. Fit tempering and pressure reduction valves where required. Flush lines before fitment to avoid damage to product.

WATER PRESSURE



Is not to exceed 500kpa as per AS3500.

PRESSURE DIFFERENCE

Hot - Cold water pressure difference is not to exceed 150kpa.

This product cannot be used with unpressurised storage heaters.

All plumbing must be tested before concealing /sheeting the wall, as per AS3500

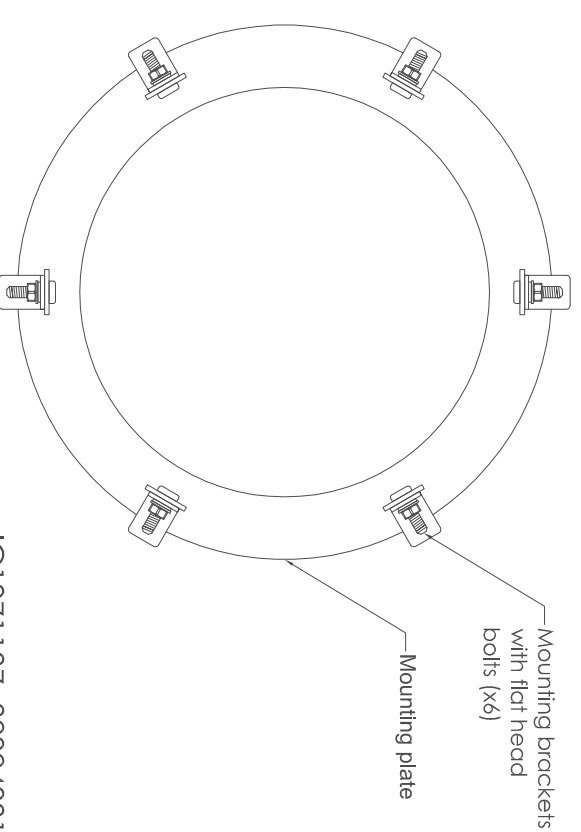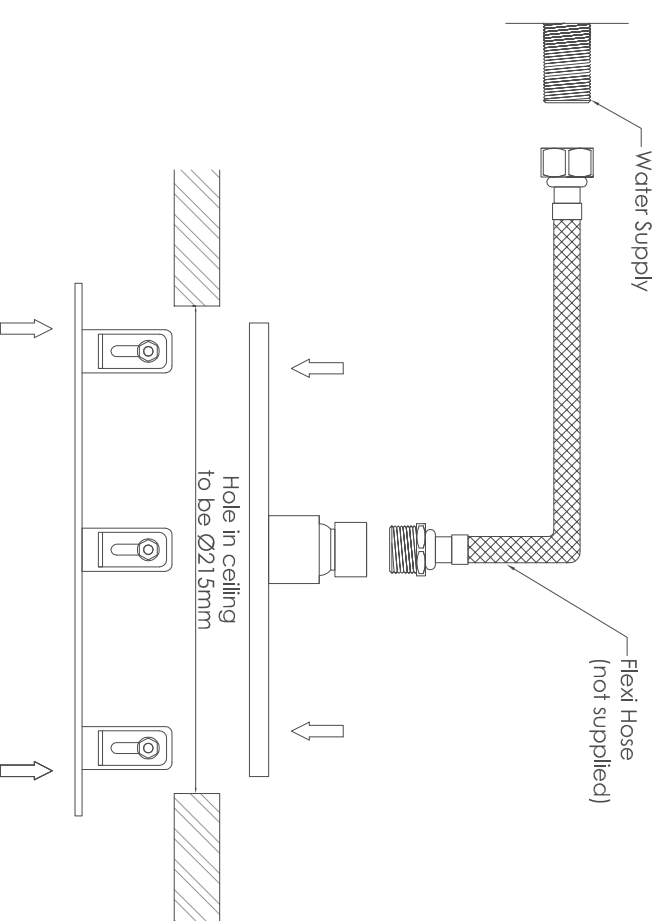

IC1971137 32024031